

USER MANUAL



(2014/53/EU art. 10-8)

(a) Frequency Range; 2402-2480 MHz

(b) Maximum radio-frequency power; 20mW (EIRP)

(2014/53/EU art. 10-9 Simplified Declaration of Conformity)

Hereby, MOB, declares that item MO3107 complies with the essential requirements and other relevant conditions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.momanual.com.

MOB, PO BOX 644, 6710 BP (NL).



PO: 41-XXXXXX
Made in China

CE	MOB, PO-BOX 644, 6710BP (NL)			
	LOT: XXXXX			
	Lithium metal	CR2032	3V	210mAh
	5.8g			B

Note:

1 x CR2032 battery included

MO3107

EN

Smart device finder

Main Functions

Locate your item

Apple's Find My network and Google's Find Hub service provide an easy, secure way to locate compatible personal items on a map using the Find My app on your Apple or Android devices. This device supports both Apple Find My network and Google Find Hub. Pairing requires an Apple or Android phone or tablet, with iOS 14.5 or Android 9 and above, but these two services cannot be used simultaneously. Activating one will automatically disable the other.

Specifications:

- Wireless version: 5.2

IOS

Button & Sound Description



1. Switch button

Power On: Press the button once (a beep will sound).

Power Off: Press and hold the button for 5 seconds (two short beeps will sound).

Reset:

1: Open the "Apple Find My" app, select your Tag, then tap "Remove Item" and confirm.

2: After removing it, press continuously the Tag button 6 times, and when you hear a long beep, the device will be reset.

Note: Please power on the Tag and remove the device from the "Apple Find My" app before resetting.

Quick instructions

1.1 Power On

Press the Tag Switch on/off Button once to turn it on. It should long beep once to indicate that it is powered on.

1.2 Check For Updates

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

2.1 Add Your Tag

Open Find My app on your supported iOS device. Turn on the Wireless function and network of your device.

2.2 Connect Your Tag

Choose "Items" Tab, then click add button and choose "Add Other Item". Once your Tag is located, tap "connect", Enter a name and choose an emoji for your Tag and tap "Continue". Find My will ask for confirmation to your Apple ID, Tap "Agree" and "Finish", then your Tag will be set up and ready to be used.

3.1 Find Tag When It's Nearby

Open Find My app and select the "Items" tab. Tap your item from the list. Tap "Play Sound" to make your Tag beep.

3.2 Find Tag Location

Open Find My app and select the "Items" tab. Tap your Tag from the list. Your Tag location will appear on the Map with a time stamp when the item was located. To navigate to the Tag's location, tap

"Directions" to open Apple Maps.

4.1 Notifications

Enable "Notify When Left Behind".

Open Find My app and select the "Items" tab. Tap on your item from the list. Under "Notifications", enable the "Notify When Left Behind" toggle. You will receive a notification when you leave your Tag behind and it's no longer in range of your device.

4.2 Enable "Notify When Found"

Under "Notifications", enable the "Notify When Found" toggle.

When your Tag is seen by another Find My network device, you will receive a notification of its location. Note : "Notify When Found" can only be activated when your Tag is out of range.

5.1 When Your Tag is Lost / Enabling "Lost Mode".

Open Find My app and select the "Items" tab. Tap on your item from the list. Under "Lost Mode" tap "Enable". A screen detailing Lost Mode will pop up, tap "Continue". Enter your phone number or email address and tap "Next". You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode". Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

Note: When "Lost Mode" is enabled, your Tag is locked and cannot be paired to a new device.

6.1 Resetting Tag

1. Open Find My app and select the "Items" tab. Tap on your item from the list. Please ensure "Lost Mode" is disabled. Scroll to the bottom of the screen and tap "Remove Item". A summary will open, tap "Remove" to confirm.

2. Press the button to power on your Tag.

3. After successfully removing the Tag from Find My app. Press continuously the Tag's power on/off button 6 times until you hear a long beep. The Tag is now reset and ready to be paired to a new Apple ID/iOS device.

7.1 Unwanted tracking

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified, Find My will send a notification to your Apple devices. This feature is available on iOS or iPadOS 14.5 or later. This features were created specifically to

discourage people from trying to track you without your knowledge.

Compatibility

To use Google's Find Hub app on your Android phone or tablet to locate Tag, the device must be running Android 9 or later with Google Play Services installed.

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements.

Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android

Product Overview

The Tag is a smart tracker device that uses Google Find Hub service, paired with the "Google Find Hub" app on Android devices, to quickly and securely locate your personal items on Google Maps. All location information remains private, and even Google cannot access it.

Before You Start

- Tag only supports the "Google Find Hub" app. Please make sure to download and install this app from the "Play Store" before use.
- The device is compatible only with Android devices running

Android 9 or higher. Tag does not support Huawei devices.

- Once Tag is paired with a device, it will be locked and cannot be paired with another device.

Button and Sound Instructions



1. Switch button

Power On: Press the button once (a beep will sound).

Power Off: Press and hold the button for 5 seconds (two short beeps will sound).

Reset:

1: Open the "Google Find Hub" app, select your Tag, tap the Settings button, then tap "Remove from Find Hub" and confirm.

2: After removing it, press continuously the Tag button 6 times, and when you hear a long beep, the device will be reset.

Note: Please power on the Tag and remove the device from the "Google Find Hub" app before resetting.

Fast Pair Instruction

Add Tag

1. Make sure your phone's Wireless function and network are turned on.
2. Press the button once to turn on Tag (a beep will sound).
3. Bring Tag close to your Android device and wait for the pop-up to show Tag. (Remark: If no pop-up appears, please restart your phone and try again).
4. Tap "Connect", read and accept the prompts to complete the pairing.
5. In the "Google Find Hub" app, select "Tag" to customize the device name and Category.

Reconnection Instructions (If you miss the pop-up)

Reset the Tag

If no pop-up appears, reset the tag by quickly pressing the button six times(a long beep).

Note: If no pop-up appears after resetting the tag, please restart your phone and try again.

Find Nearby

In the "Google Find Hub" app, select your Tag and tap "Play Sound" to locate your device. Once found, tap Stop Sound to silence the device.

Find Far Away

In the "Google Find Hub" app, select your Tag, tap the device to view its location.

To navigate to the location, tap "Get Directions" to open map navigation.

Enable Lost Mode

In the "Google Find Hub" app, select your Tag and tap "Mark as Lost".

Add your contact information and you will get a notified if the Find Hub network locates it.

Tag Location Sharing

In the "Google Find Hub" app, select your Tag, then tap "Share Device".

Connect to another phone

 
After completing the reset process, then connect to another Android phone. Battery

Tag contains a button battery. The battery may need to be replaced during the life of the product. Replace only with batteries of the same type (CR2032) and rating, observing correct polarity.

Battery replacement:

1. Disassemble the product into two parts through the gap between the upper cover and the lower cover.
2. Remove the battery.
3. Insert the CR2032 battery into the device with the positive (+) side facing up.

4. Connect the upper cover and the lower cover, and press tightly.



*After replacing the battery, you can use it without reconnection.

Warnings:

- Do not ingest battery, Chemical Burn Hazard.
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Works with
Apple Find My



Works with Android
Find Hub